

REGULAR MAINTENANCE OF THE MECHANISM

The mechanisms of sofas and extra beds require regular maintenance to ensure their proper functioning.

Maintenance procedure:

At least twice a year, it is necessary to lubricate the moving parts of the mechanism (rivets, levers and pins, see figure) in several stages (positions) of opening the mechanism. Failure to lubricate regularly can cause unpleasant noises such as creaking and squeaking. The manufacturer of the mechanism recommends using SVITOL silicone-based spray for this purpose, which is the Italian version of our WD 40.

It is also necessary to remove dust and dirt from the mechanical parts.

It is also important to ventilate the mattress regularly so that moisture can evaporate.

